MR. GOODBAR®

The Original Home Security Bars

INSTALLATION INSTRUCTIONS
DIRECTIVES D'INSTALLATION

1. Position grille on either the outside or inside surface of the door, centred over the window opening. Mark position of feet for drilling.
2. Drill four 1/4" (6.35 mm) holes through the door where marked.
3. Insert carriage head bolts from the outside surface of the door.
4. Place washers on bolts, then secure with wingnuts.

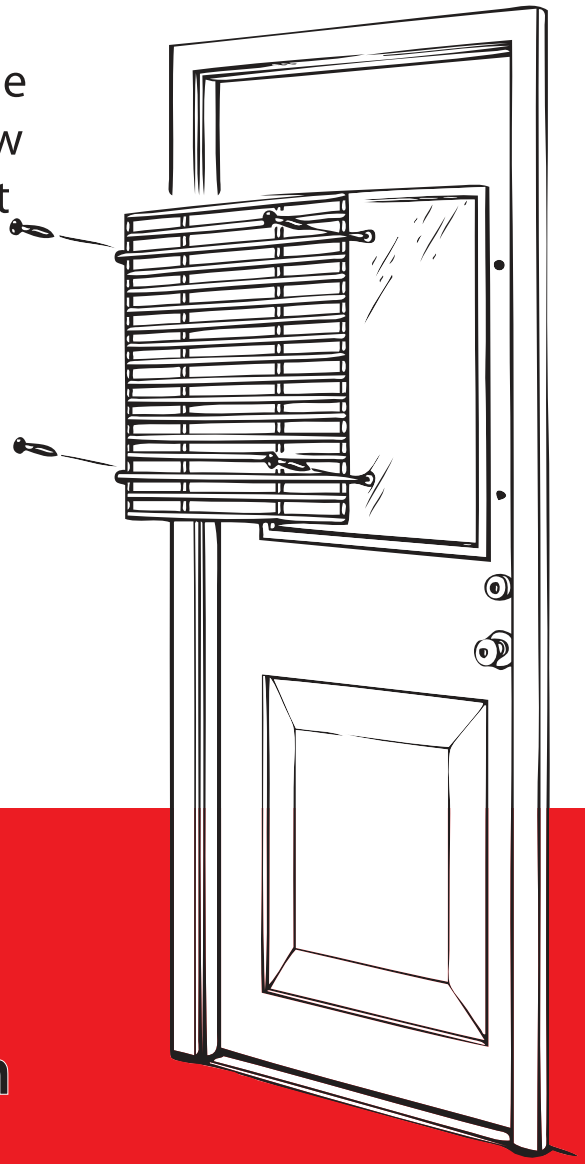

1. Placez la grille à l'intérieur ou à l'extérieur de la porte. Centrez-la sur la fenêtre. Marquez pour le percement.
2. À chaque point marqué, percez un trou de 1/4 de po (6,35 mm) à travers la porte.
3. Insérez les boulons de carrosserie depuis l'extérieur de la porte.
4. Mettez les rondelles sur les boulons, puis fixez avec des écrous à oreilles.

TOLL-FREE SUPPORT
1-800-661-7555
or visit our website at:
www.goodbarsecurity.com

ASSISTANCE SANS FRAIS
1-800-661-7555
ou visitez notre site Web à:
www.goodbarsecurity.com